




- Only qualified electrical personnel should install this equipment.
- Before performing installation or maintenance, disconnect all sources of electric power.
- Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.

Find diagrams for more configurations at wattwatchers.com.au/support

Installation Notes:

- Maximum solar voltage and current output must not exceed contactor ratings.
- 2) Auditor is DIN-rail mounted and requires 35mm wide space.
- 3) Current transformer installation -
 - For grid monitoring, K -> L arrow is towards load. For solar monitoring, K -> L arrow is away from solar.
- 4) Current transformers must be suitably secured in position.
- 5) All wiring shall be tidy and secured in accordance with the wiring rules in your jurisdiction.
- 6) An existing or new protective device can be used depending on the regulations in your jurisdiction.
- 7) Note the maximum current rating of contactor must be greater than the maximum output current of the solar inverter.
- 8) Other current transformers may be used to monitor other loads as
- 9) For more information, refer to the quick start guide and wattwatchers.com.au/support

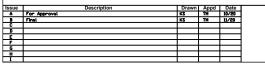



COPYRIGHT 2020 BY WATTWATCHERS	
ALL RIGHTS RESERVED. NO PART OF THE CONTENTS OF THIS DRAWING MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM BY PARTIES OTHER THAN THOSE EMPLOYED BY OR ENGAGED BY WATTWATCHERS	
AND ONLY IN DIRECT CONNECTION WITH THE PURPOSE FOR WHICH THIS DRAWING HAS BEEN PROVIDED WITHOUT THE WRITTEN PERMISSION OF WATTWATCHERS	

	KS	10/20	SOLAR REMOTE	DIAGRA
I	Approved By	Date 10/20	DISCUMNECTION	חוחמות

A6M+3SW
MONITORING 1-PHASE MAINS + SOLAR
WITH GENERIC AC DISCONNECT