



- Only qualified electrical personnel should install this equipment.
- Before performing installation or maintenance, disconnect all sources of electric power.
- Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.

Find diagrams for more configurations at wattwatchers.com.au/support

Installation Notes:

- 1) Refer to Solar Inverter documentation to confirm specific DRMO connection terminals and technical requirements. DRMO maximum signal voltage and current must not exceed contactor ratings.
- 2) Auditor is DIN-rail mounted and requires 35mm wide space.
- 3) Current transformer installation -

For grid monitoring, K -> L arrow is towards load. For solar monitoring, K -> L arrow is away from solar.

- 4) Current transformers must be suitably secured in position.
- 5) All wiring shall be tidy and secured in accordance with the wiring rules in your jurisdiction.
- 6) An existing or new protective device can be used depending on the regulations in your jurisdiction.
- 7) Other current transformers may be used to monitor other loads as required.
- 8) For more information, refer to the quick start guide and wattwatchers.com.au/support





COPYRIGHT 2020 BY WATTWATCHERS					
ALL RIGHTS RESERVED. NO PART OF THE CONTENTS OF THIS DRAWING MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM BY PARTIES OTHER THAN THOSE EMPLOYED BY OR ENGAGED BY WATTWATCHERS AND ONLY IN DIRECT CONNECTION WITH THE PURPOSE FOR WHICH THIS DRAWING HAS BEEN PROVIDED WITHOUT THE WITHTITEN					
PERMISSION OF WATTWATCHERS					

	KS	10/20	SOLAR REMOTE	DIAGRA
1	Approved By TM	Date 10/20	DISCHNILCTION	חוחחוגר
	119	107 20		

RAMS MONITORING 1-PHASE MAINS + SOLAR WITH GENERIC DRMO CONTROL

 Project Code
 Status
 Re B

 20181082
 FA
 B

 Drawing No.
 Scale
 NTS