



• Only qualified electrical personnel should install this equipment.

- Before performing installation or maintenance, disconnect all sources of electric power.
- Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.

Find diagrams for more configurations at wattwatchers.com.au/support

Installation Notes:

- 1) Auditor is DIN-rail mounted and requires 35mm wide space.
- 2) Current transformer installation -

For solar monitoring, K is towards inverter, arrow is towards load.

3) Connect the R-coil shields to the respective coil terminals marked 1-, 2-, 3-

4) Current transformers must be suitably secured in position.
5) All wiring shall be tidy and secured in accordance with the wiring rules in your

- jurisdiction.

 6) An existing or new protective device can be used depending on the regulations in your jurisdiction.
- 7) Follow the rules in your jurisdiction for the use of RCD protection.
- 8) For more information, refer to the quick start guide and wattwatchers.com.au/support

Place rogowski coil connected to	On cables connected to
Terminals 1+ and 1-	A-Phase
Terminals 2+ and 2-	B-Phase
Terminals 3+ and 3-	C-Phase

Issu	ue Descr	ption Drawn Appd Date		T2 9 WATTWAT	Client Details	Drawn By	Date	Project itle	Drawing itle	Project Code	Status	Revision
I ↑	rmet	16 35 18/19		12 7 WALLWAL		lke i	03/19	CONNECTION DIAGRAMS	l A O D	20180153	ETNIAL	IΔ
-			alicalicalic	A T V ATT TTT AW		1.3	03/17			E0100122	LINHE	ייון
3			· wattwatchers	T TAT M A WATTWAT					MONITORING 3-PHASE SOLAR	Describe a No.	Cools	
- 6				A T T WTT WILL		Approved By	Date			Drawing No	Scale	_
I ₹	-		DIGITAL ENERGY	T AW A V WT TT W TT		l ic	03/19			WW018041	INIIS	`
-				M WATTWAT		JUC	03/17				N	د
l T				1	l	1	1		1	1	1	