



Only qualified electrical personnel should install this equipment.

- Before performing installation or maintenance, disconnect all sources of electric power.
   Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- Find diagrams for more configurations at wattwatchers.com.au/support

## Installation Notes:

- Auditor is DIN—rail mounted and requires 35mm wide space.
- 2) Current transformer installation -

For grid monitoring, K is towards grid, arrow is towards load.

For load monitoring, K is towards grid/inverter, arrow is towards load.

For solar monitoring, K is towards inverter, arrow is towards load.

- 3) Current transformers must be suitably secured in position.
- 4) All wiring shall be tidy and secured in accordance with the wiring rules in your jurisdiction.
- An existing or new protective device can be used depending on the regulations in your jurisdiction.
- 6) Follow the rules in your jurisdiction for the use of RCD protection.
- Wattwatchers recommends the placement of monitoring CT's on the circuits being switched, but this is not mandatory.
- 8) For more information, refer to the quick start guide and wattwatchers.com.au/support





						12 9	WA	IWAI			
			Т		v	A T	т	т	т	т	AW
MA						TA	M TT	A		M	AT
T		т	Α	T	M			A		WATT	WAT
Α					T	T	WT	T			w
	T			AW	A <sub>M</sub>		WATT	W T WAT	TT	w	π

KS	03/19
Approved By JC	03/19

CONNECTION DIAGRAMS

A6M+3SW MUNITURING 2-PHASE MAINS + 1-PHASE LUAD + SULAR + SWITCH